

# **ProtoThrottle**

**Realistic Control Stand Throttle**

## **MANUAL**

Ver. 2, 2/18

**PRELIMINARY, SUBJECT TO CHANGE**



**IOWA SCALED ENGINEERING – ELECTRONICS MADE EASY!**

[www.protothrottle.com](http://www.protothrottle.com)

## **Thank you for purchasing the ProtoThrottle.**

Our goal was to design and develop a wireless throttle that provides the diesel modeler with the most realistic experience operating their model locomotives.

The ProtoThrottle mimics a standard EMD control stand including full detent throttle and reverser handles, a spring-loaded horn handle, a push-on/push-off bell button, and fully programmable front and rear headlights with a setting for ditch lights. In addition, the ProtoThrottle comes with a robust faceplate machined from aluminum, including prototype bezels, and anodized to give the look and feel of a real control stand.

The ProtoThrottle comes with our commitment to your satisfaction. We warranty the throttle from manufacturing defects for one year, and if you should have any questions or issues with the ProtoThrottle, please contact us.



**Scott Thornton**



**Michael Petersen**




**Nathan Holmes**

# Table of Contents

ProtoThrottle Controls & Battery Install	4
Quick Start Guide	5
Main Screen	6
Engine Menu	7
Tonnage Menu	8
Load Configuration Menu	9
Set Locomotive Menu	10
Force Function Menu	11
Configuration Function Menu	12
Notch Configuration Menu	14
Threshold Calibration Menu	15
Communication Configuration Menu	16
Preferences Menu	17
Diagnostics Menu	19
Menu Map	21
Electronics Schematic	22
Licensing / Support	23
Open Source Development	24
Notes	25


# ProtoThrottle Controls & Battery Install

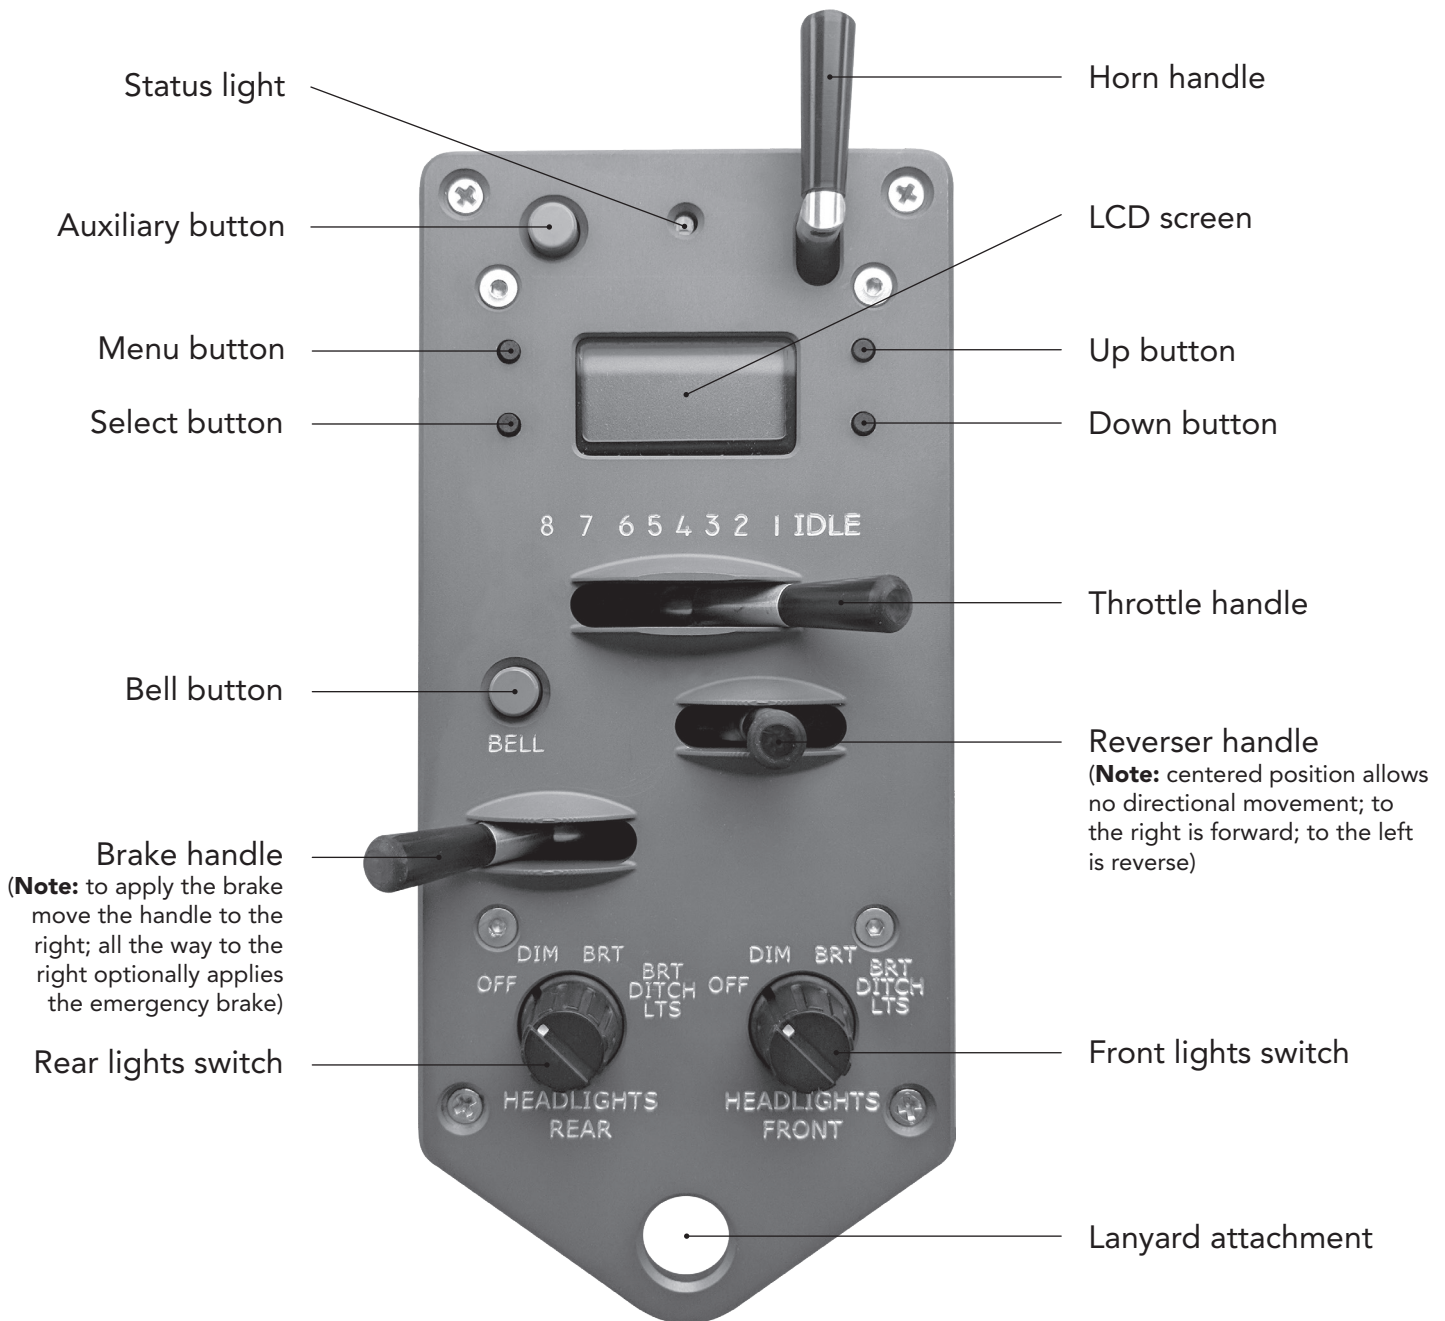

The ProtoThrottle is powered by 2 AA batteries (not included). The batteries can be alkaline or rechargeable NiMH.

To access the battery holder, unscrew the 4 phillips head screws on the corners of the throttle's faceplate; remove the box; **IMPORTANT:** when removing the batteries from the holder, use one hand to hold **both** sides of the holder to prevent it from bending away from the printed circuit board; insert batteries and reattach the box. **Do not over tighten the screws.**

**To conserve battery life:** make sure the throttle handle is in "idle" position and the reverser handle is in "centered" position when not in use. This will cause the throttle to go to sleep after 5 minutes.

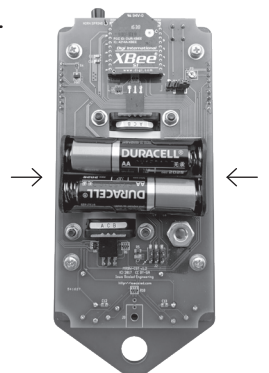

# Quick Start Guide

The ProtoThrottle will work with any scale and with sound- or non-sound decoders (though using sound enhances the control stand experience significantly). All of the current decoders on the market will work with the ProtoThrottle because it uses standard DCC commands and functions. The ProtoThrottle is not a DCC system and will not replace the system you use.

The ProtoThrottle currently supports Lenz and NCE DCC systems. Additional systems will be future releases. Check our website periodically for updates.

**NOTE: if the ProtoThrottle is in "sleep" mode the LCD screen will be dark, click any of the LCD buttons to wake the throttle.**







1

Using your DCC system, **set acceleration momentum mid-range to moderately high** so that the ProtoThrottle will need to "notch up" to get the train moving.

**Set deceleration momentum high or maximum** depending on your decoders braking function. This will allow the train to "coast" when the throttle is in the idle position requiring the use of the brake to slow or stop the train.

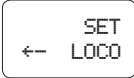2

**Input the locomotive number into the ProtoThrottle:**






	1. Click the Menu button 4 times		2. Click the Select button once		3. Use the Up and Down buttons to change numbers
	4. Use the Menu button to move cursor right		5. After number is input, click Select button to save		

**NOTE: the ProtoThrottle function settings are set to standard DCC function numbers by default. If you need to change any function number, the steps are explained below:**

5

3

**To set the horn, bell, and brake function numbers:**

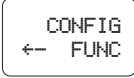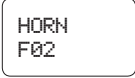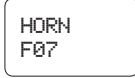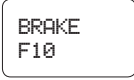
	1. Click the Menu button 6 times		2. Click the Select button once		3. Click the Up or Down button to change the function number
	4. Click Menu button to toggle through the other function choices. Repeat step 3 to change additional function numbers.				5. Click the Select button to save all changes

4

**Enjoy operating your locomotive!**

**Please read the entire manual to familiarize yourself with all the features of the ProtoThrottle.** See our website for more specific instructions on programming lights and our future tonnage feature.


In addition, our website has detailed operational scenarios developed by professional locomotive engineer, Tim Garland. If you are not familiar with prototype operation from an engineer's perspective, Tim's scenarios will give you insight on how to operate more realistically using the ProtoThrottle.

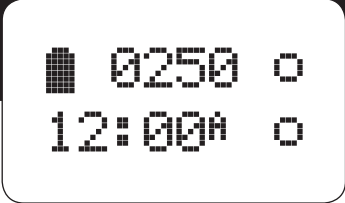

ELEMENT	DESCRIPTION
0250	<p>Locomotive Address. Extended (also known as long or 4-digit) addresses are displayed directly (e.g. 0250 0000 9999). Primary (also known as short or 2-digit) addresses are displayed with an 's' prefix (e.g. s003 s000 s127).</p> <p>After the locomotive address is set it will display constant. In certain situations it may be replaced by an alert message:</p> <p>EMRG Emergency stop is active! REV! Reverser was moved with the throttle not in idle</p>
12:00 <sup>AM</sup>	<p>The ProtoThrottle acts as a secondary display for Iowa Scaled Engineering's wireless fast clocks <a href="http://www.iascaled.com/store/MRB-FCM">www.iascaled.com/store/MRB-FCM</a> or the fast time provided by the NCE Cab Bus.</p> <p><sup>AM</sup> 12-hour mode AM indicator <sup>PM</sup> 12-hour mode PM indicator</p> <p>No AM or PM indicator when in 24-hour mode.</p>
	<p>Battery Status</p> <p> Batteries good  Batteries low  Replace batteries</p>
	<p>Up/Down Button Status. On the main screen, the Up and Down buttons can be assigned to functions. The on/off status of those assigned functions are displayed on the LCD screen.</p> <p> Function off  Function on</p>

Advance to Engine Menu

Toggle backlight on / off

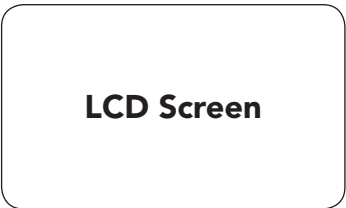

Up

Down

**NOTE:** these buttons can be assigned a function using the Configure Function menu

### DESCRIPTION

The behavior of the Engine menu depends on the configuration of the **ENG ON** and **ENG STOP** settings in the **Configure Function menu**. For DCC decoders that take a single function on/off to turn the prime mover on/off (such as ESU Loksound decoders), configure **ENG ON** to that function number and set **ENG STOP** to off. The Engine menu will then change between OFF and ON when pressing the Up and Down buttons.

ENGINE  
OFF

ENGINE  
ON

If a decoder is edge triggered instead (requires a function on/off transition) to turn the prime mover on and off (such as Soundtraxx Tsunami 2), set both **ENG ON** and **ENG STOP** to the appropriate function numbers. In this case, the Engine menu will display **STARTING** and **STOPPING** between the ON and OFF settings as the appropriate functions are pulsed.

ENGINE  
OFF

ENGINE  
STARTING

ENGINE  
ON

ENGINE  
STOPPING

ENGINE  
OFF

7

If the throttle is not in idle when attempting to turn off the prime mover, a warning will be displayed and the **ENG STOP** function will not be sent. Move the throttle back to idle to continue.

NOT  
IDLE

#### Example #1, F8 for ESU Loksound:

ENG ON = F08

ENG STOP = F--

#### Example #2, F5 (on, RPM+) and F6 (off, RPM-) for Soundtraxx Tsunami 2:

ENG ON = F05

ENG STOP = F06

Advance to Tonnage Menu

Return to Main Screen

LCD Screen

Start or turn on prime mover

Stop or turn off prime mover

# Tonnage Menu

LIGHT   
ENGINE 

LOW   
WEIGHT 

MEDIUM   
WEIGHT 

HEAVY   
WEIGHT 

**Note:** the tonnage feature is a future release.  
Watch our website for updates.

8

Advance to Load Configuration Menu

Return to Main Screen

LCD Screen

Increase tonnage value

Decrease tonnage value



# Load Configuration Menu

LOAD CNF  
01: 0250

## ELEMENT

## DESCRIPTION

01

Configuration Number. Up to 15 distinct configurations (locomotive address, function mappings, throttle notch settings) can be stored in the ProtoThrottle and recalled quickly using this menu.

0250

Locomotive Address. This is the locomotive address associated with the selected configuration number.

9

Advance to Set Locomotive Menu



Load selected configuration and return to Main Screen.  
(Any future changes to the locomotive address, function mappings, or throttle notch settings will be stored in this configuration.)



LCD Screen



Increase configuration number



Decrease configuration number

# Set Locomotive Menu

← SET  
LOCO

Advance to Force Function Menu ●

Enter Set Locomotive Sub-Menu ●

LCD Screen

None

None

Set Locomotive Sub-Menu

0250  
^

10

ELEMENT

DESCRIPTION

0250

Locomotive Address.

^

Digit Selector.

Move Digit Selector to the next digit ●

Save locomotive address and return to Set Locomotive Menu ●

LCD Screen

● Increase selected digit. Increasing the first digit above 9 selects primary (also known as short or 2-digit) addresses, indicated by an 's' prefix in the first digit.

● Decrease selected digit. To select extended (also known as long or 4-digit) addresses, press the Down button when the first digit displays an 's' and is selected by the Digit

# Force Function Menu

← FORCE  
FUNC

Advance to Configure Function Menu



LCD Screen



None

Enter Force Function Sub-Menu



None

**NOTE:** The Force Function menu allows any of the 29 standard DCC functions to turn ON or OFF, regardless of any other ProtoThrottle lever or button. These can be used to test functions or control additional features of the decoder such as auxiliary, class, or lesser used lights.

F00 ---

Force Function Sub-Menu

## ELEMENT

## DESCRIPTION

11

F00

Function Number. Available range from function 0 to function 28.

---

Function Setting.  
--- Ignored, function can be controlled by a ProtoThrottle button or lever  
ON Function forced on, regardless of any other button or control  
OFF Function forced off, regardless of any other button or control

Cycle through Function Numbers



LCD Screen



Cycle through Function Settings

Save function settings and return to Force Function Menu



Cycle through Function Settings

# Configure Function Menu

CONFIG  
← FUNC

Advance to Notch Configuration Menu



LCD Screen



Up

Enter Configure Function Sub-Menu



Down

Configure Function Sub-Menu

UP BTN  
F00 MOM

## ELEMENT

## DESCRIPTION

UP BTN


Control Name. The name of the ProtoThrottle button or handle to which a function can be assigned.

- HORN Horn lever
- BELL Bell button
- BRAKE Brake lever, when brake is activated
- BRK OFF Brake lever, when in the full left position
- AUX Aux button
- ENG ON Prime mover ON/start function (see Engine menu for details)
- ENG STOP Prime mover stop function (see Engine menu for details)
- THR UNLK Function which, when active due to another control, allows the throttle to send speed commands when the reverser is in centered position. (e.g. Loksound Drive Hold)
- F.HEAD Front headlight; active in the Bright and Ditch Lights settings
- F.DITCH Front ditch lights; active in the Ditch Lights setting
- F.DIM #1 Front dim headlight function #1; used in the Dim setting
- F.DIM #2 Front dim headlight function #2; used in the Dim setting
- R.HEAD Rear headlight; active in the Bright and Ditch Lights settings
- R.DITCH Rear ditch lights; active in the Ditch Lights setting
- R.DIM #1 Rear dim headlight function #1; used in the Dim setting
- R.DIM #2 Rear dim headlight function #2; used in the Dim setting
- UP BTN Main screen Up button
- DOWN BTN Main screen Down button

F00

Function Number. The function to be activated when the associated ProtoThrottle button is pressed or control is moved. Available settings are none (F--) and functions 0 (F00) to 28 (F28).

MOM	Momentary / Latching Function. Only appears for the Up and Down button assignments.
MOM	Momentary – the function is only active while the button is pressed
LAT	Latching – the function toggles on and off with each press of the button

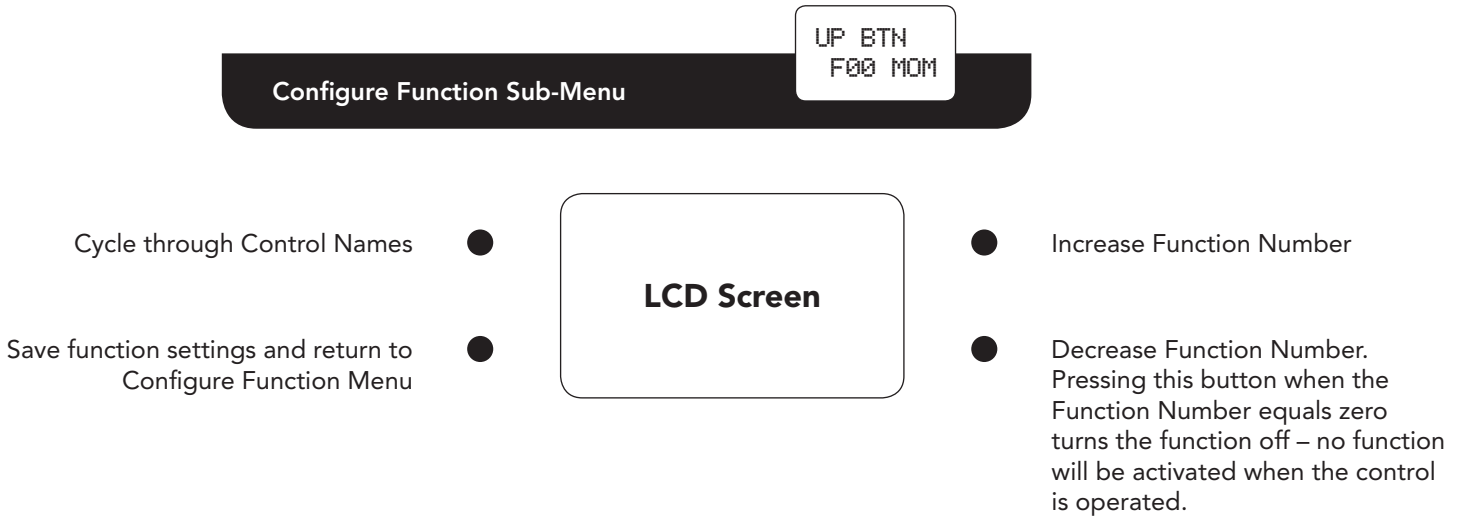

# Notch Configuration Menu

NOTCH  
← CFG

Advance to Threshold Calibration Menu



LCD Screen



None

Enter Notch Configuration Sub-Menu



None

Notch Configuration Sub-Menu

NOTCH #  
102

## ELEMENT

## DESCRIPTION

#

Notch Number.

102

Speed Step. The speed step to send when the throttle is in the selected Notch Number. Range from 1 to 126 (128 speed step mode only). Idle is always speed step zero.

14

Cycle through Notch Numbers



LCD Screen



Increase Speed Step

Save notch settings and return to  
Notch Configuration Menu



Decrease Speed Step

# Threshold Calibration Menu

THRESHOLD  
← CAL

Advance to Communication Configuration



LCD Screen



None

Enter Threshold Calibration Sub-Menu



None

Threshold Calibration Sub-Menu

HORN ○  
240

## ELEMENT

## DESCRIPTION

NAME

Control Name. The name of the ProtoThrottle control to be calibrated. Hold the control in the desired location and press the Up button to set the new calibration value.

HORN Threshold for the horn function activation

BRAKE Threshold for the brake function activation

BRAKE LOW Left brake handle stop

BRAKE HIGH Right brake handle stop; also threshold for emergency stop

○

Control Status. Shows the on/off status of the selected control.

○ Off

■ On

240

Internal ADC value for the selected control. Can normally be ignored, unless you're developing code for the ProtoThrottle or are just a nerd.

15

Cycle through Control Names



LCD Screen



Set new calibration value

Save threshold settings and return to  
Threshold Calibration Menu



None

# Communication Configuration Menu

COMM  
← CFG

Advance to Preferences Menu

LCD Screen

None

Enter Communication  
Configuration Sub-Menu

None

Communication Configuration Sub-Menu

THRTL ID  
A

## ELEMENT

## DESCRIPTION

THRTL ID  
A

**Throttle ID.** Set each throttle to a unique ID using letters A-Z

BASE ADR  
04

**Base Address.** Set to the address of the ProtoThrottle receiver – see receiver instructions.

TIME ADR  
BASE

**Time Source Address.** Selects the fast time source. Set to "BASE" to display time information received from the command station by the ProtoThrottle receiver. To use an Iowa Scaled Engineering Wireless Fast Clock Master, set to the Node Address of the clock (0x01 to 0xFE). Set to "ALL" to display any time information received by the ProtoThrottle. The "ALL" setting works well with a single receiver in a private setting, but may result in erratic time display when multiple ProtoThrottle receivers are in close proximity (e.g. a public train show).

Cycle through Address Names

LCD Screen

Increase Address

Save address settings and return to  
Communication Configuration Menu

Decrease Address



# Preferences Menu

PREFS



Advance to Diagnostics Menu



LCD Screen



None

Enter Preferences Sub-Menu



None

## Preferences Sub-Menu

ELEMENT	DESCRIPTION
<div>SLEEP DLV: 5M</div>	<b>Sleep Delay.</b> Time until the throttle automatically enters low power mode. The throttle handle must be in idle, the reverser handle in centered position, and no buttons or controls actuated for this time. Range from 1 to 99 minutes.
<div>TIMEOUT CLK: 10s</div>	<b>Clock Timeout.</b> Maximum time between fast clock time packets. If no time information is received in this interval, the clock display will show dashes to indicate it has lost communication with the fast clock master. Range from 1 to 25 seconds.
<div>TX INTVL 1s</div>	<b>Transmit Interval.</b> Time between periodic wireless transmissions to the ProtoThrottle receiver. This setting is locked and should not normally need to be changed by the user.
<div>TX HLD OF 0.15s</div>	<b>Transmit Holdoff.</b> Minimum time between wireless transmissions to the ProtoThrottle receiver. This setting is locked and should not normally need to be changed by the user.
<div>VAR BRK ON</div>	<b>Variable Brake.</b> When set to ON, the brake function will be pulsed at a duty cycle corresponding to the brake handle position, simulating varying amounts of braking force. It is recommended to disable the emergency brake when variable braking is enabled. When set to OFF, the brake will be a simple on/off function based on the brake calibration setting (see the Threshold Calibration Menu).
<div>BRK PWM 1.0s</div>	<b>Brake Pulse Timing.</b> This sets the rate at which pulse commands are sent during braking. A smaller value results in smoother braking but can result in a less responsive system due to the higher rate at which commands are being sent.

Preferences Sub-Menu

ELEMENT

DESCRIPTION

BRK ESTP  
ON

**E-Stop on Brake Handle.** When set to ON, the brake handle can set emergency stop for the selected locomotive when moved past the Brake High threshold. When set to OFF, the brake handle will not cause an emergency stop to be set.

LED BLNK  
ON

**LED Blink.** When set to ON, the LED on the ProtoThrottle will blink green when communication with a ProtoThrottle receiver is active. When set to OFF, the LED will remain off when communication is active. The LED will always blink red when no communication link has been established.

REV SWAP  
OFF

**Reverser Swap.** When set to ON, the reverser directions are swapped. This can be used to correct for a locomotive whose direction is set incorrectly or when changing the leading end of a back-to-back consist. When set to OFF, the reverser directions are normal.

REV LOCK  
ON

**Reverse Lock.** When set to ON, the reverser can only change the locomotive direction when the throttle is in idle, just like the prototype (in fact, on the prototype, the reverser handle is locked and cannot be moved). If the reverser is moved when the throttle is not in idle, the direction will remain the same and the Main Screen will display REV!. When set to OFF, the reverser is allowed to change the direction regardless of the throttle setting.

Cycle through preference settings



LCD Screen



Increase value or turn on setting

Save preference settings and  
return to Preferences Menu



Decrease value or turn off setting

# Diagnostics Menu

DIAGS



Return to Main Menu

LCD Screen

None

Enter Diagnostics Sub-Menu

None

## Diagnostics Sub-Menu

ELEMENT	DESCRIPTION
	<b>Controls Display.</b> Shows the current status of the ProtoThrottle controls and buttons.
	<b>Sleep Timeout.</b> Shows the number of seconds until the throttle goes to sleep.
	<b>Packet Timeout.</b> Timer reset by each packet received from the ProtoThrottle receiver. Communication is considered lost when the bar reaches zero.
	<b>Received Signal Strength Indicator.</b> Reports the strength of the wireless connection to the throttle.
	<b>Fast Time Ratio.</b> Reports the fast time ratio from the last update received.
	<b>Battery Voltage</b>
	<b>ProtoThrottle Firmware Version</b>
	<b>ProtoThrottle Firmware Short Git Hash</b>

Continued on next page

## Diagnostics Sub-Menu

### ELEMENT

### DESCRIPTION

BASE TYP  
CAB BUS

**Base Type.** The type of ProtoThrottle receiver to which the ProtoThrottle is connected.

BASE REV  
B187EC

**Base Unit Short Git Hash**

FACTORY  
RESET 5→

**Factory Reset.** Press the Down button 5 times to reset the ProtoThrottle to factory settings. **WARNING: This will erase all configuration settings, except those in the Threshold Calibration menu, so use with caution!**

Cycle through diagnostics settings



LCD Screen




None


Return to Diagnostics Menu



None

# Menu Map

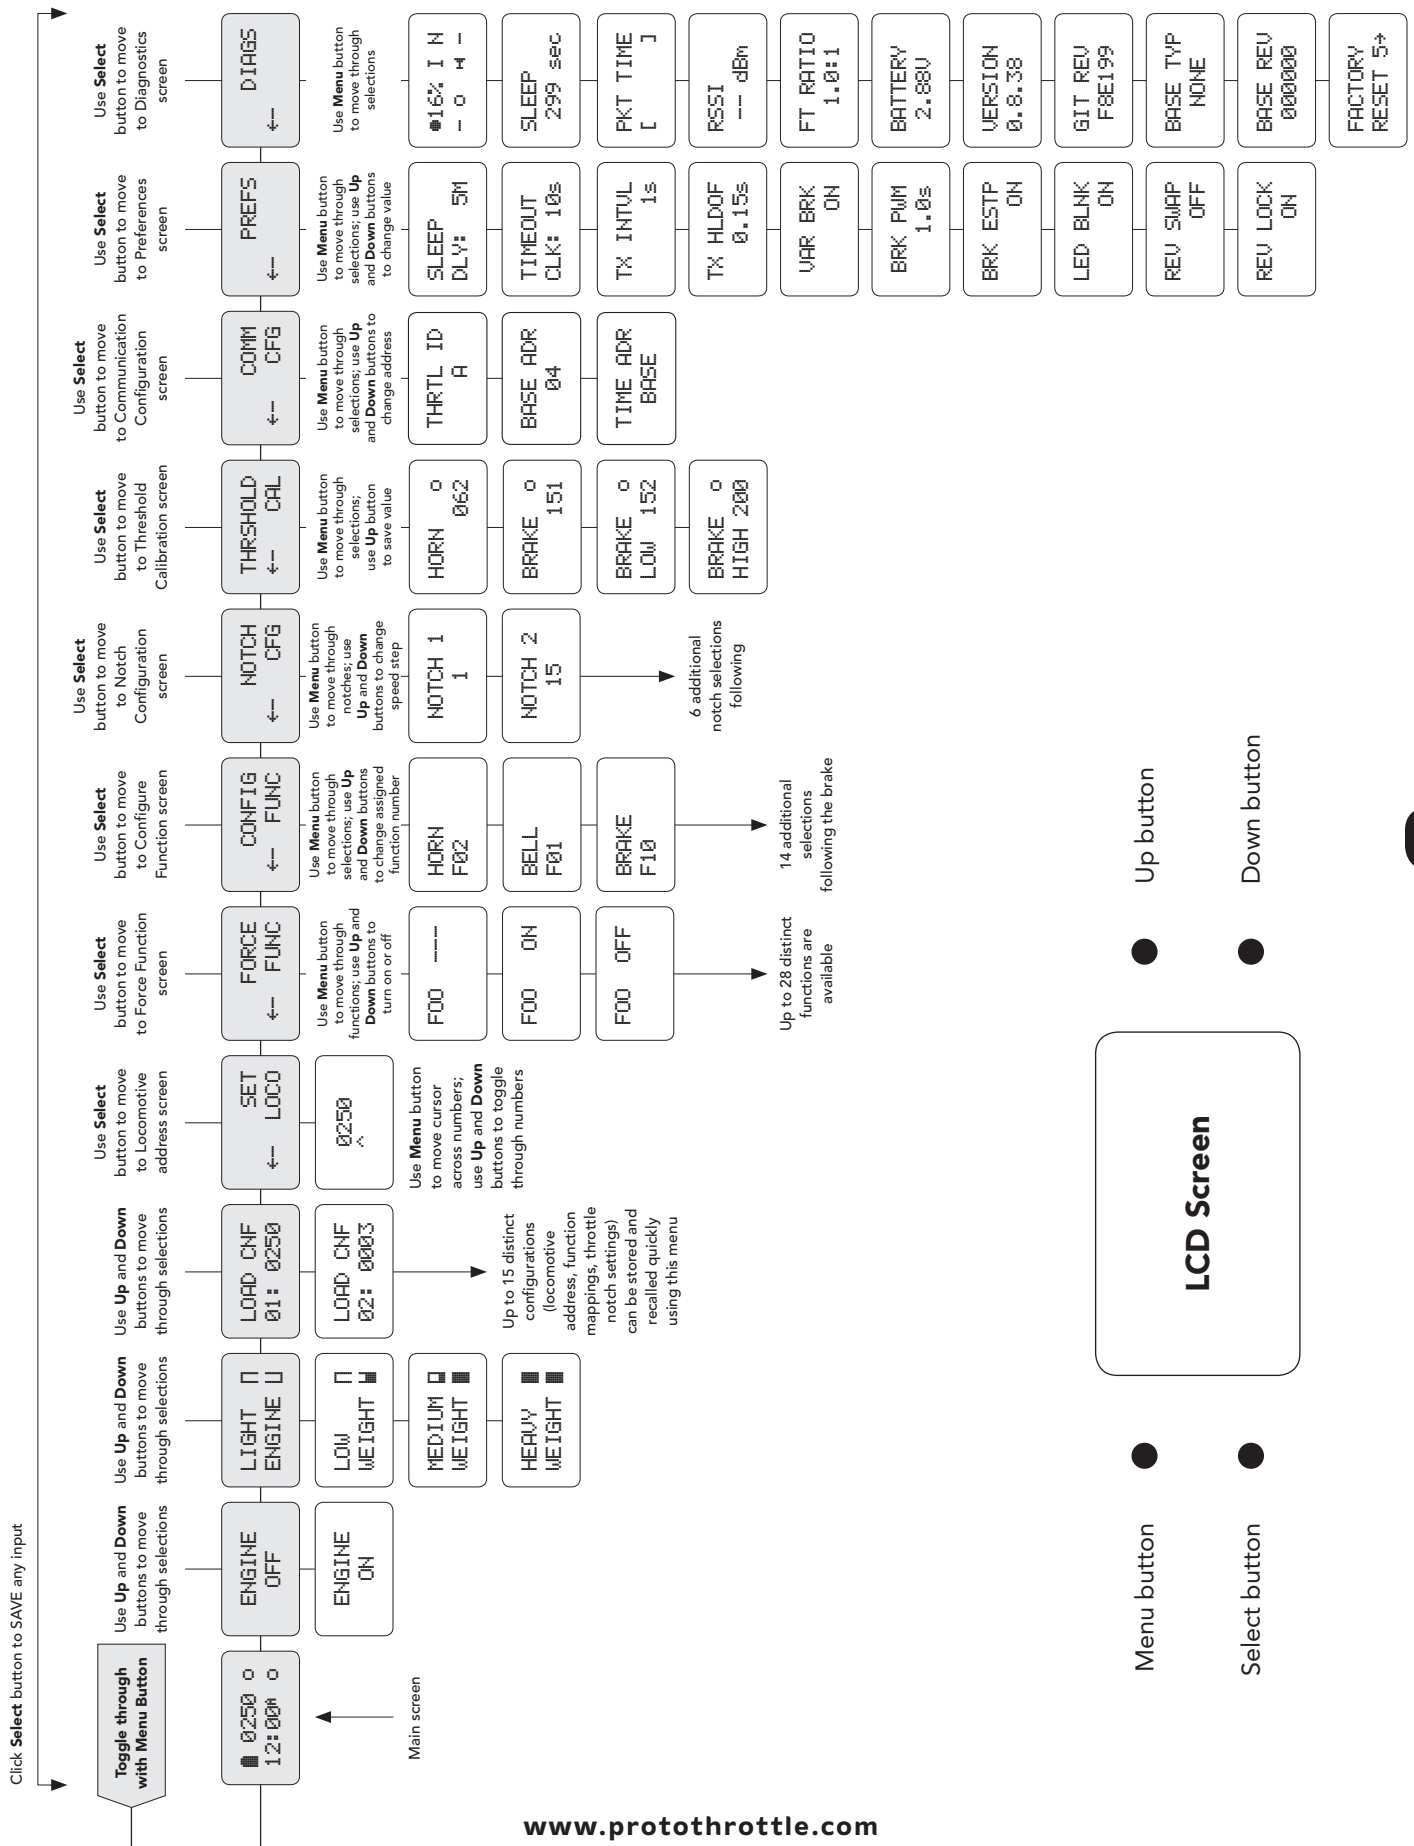

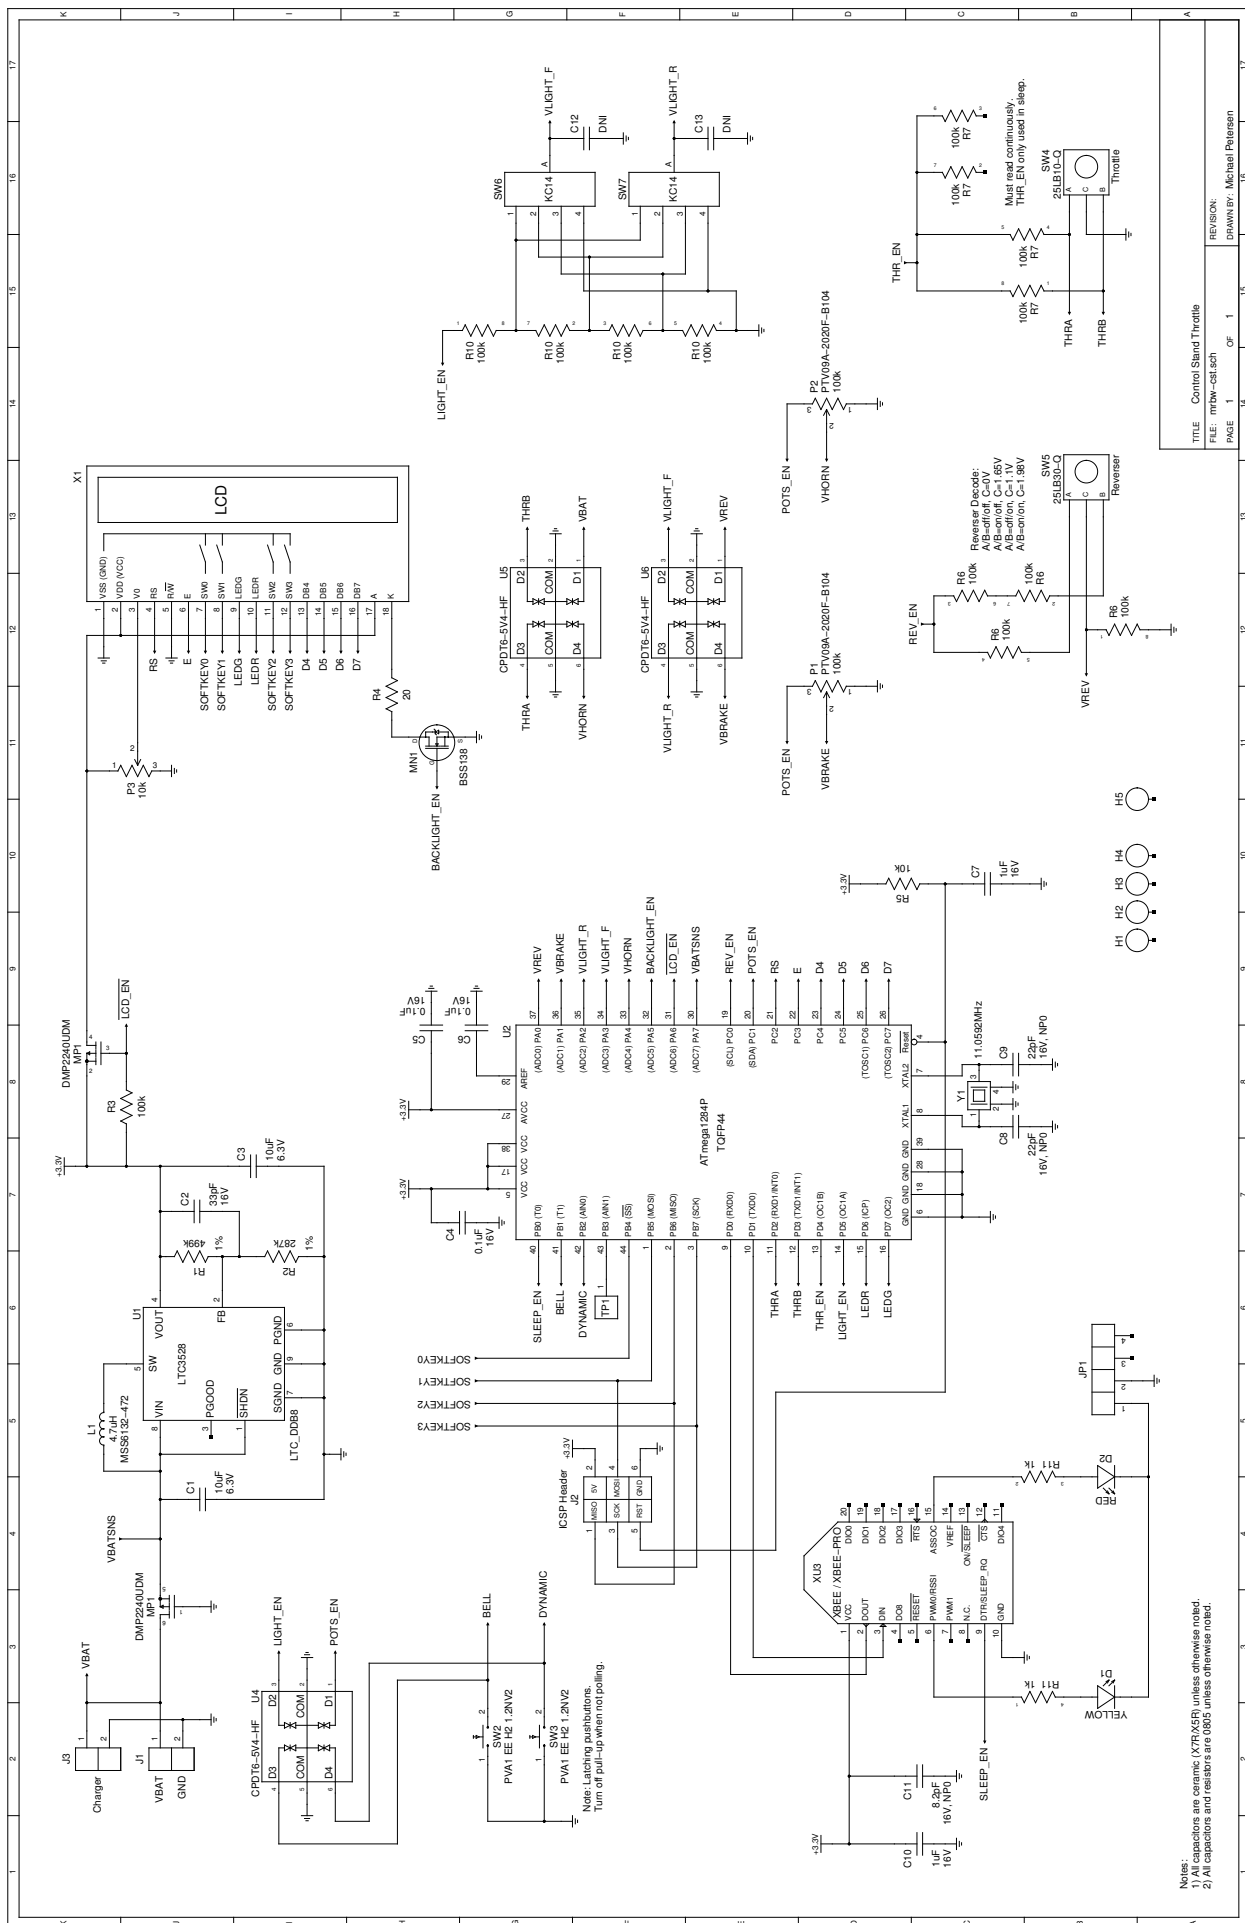

## Open Design

Iowa Scaled Engineering is committed to creating open designs that users are free to build, modify, adapt, improve, and share with others.

## Hardware

The design of the ProtoThrottle hardware is open source hardware, and is made available under the terms of the Creative Commons Attribution-Share Alike v3.0 license, a copy of which is available from: <http://creativecommons.org/licenses/by-sa/3.0/>

Design files can be found on the Iowa Scaled Engineering's Github site: <https://github.com/IowaScaledEngineering/mrbw-cst>

## Firmware

The official Iowa Scaled Engineering firmware for the ProtoThrottle is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version. A copy of the GNU GPL can be found at: <http://www.gnu.org/licenses/gpl.html>

New firmware can be flashed into the ProtoThrottle through J2.  
The six pins are a standard AVR 6-pin ISCP programmer connection.

Contains FCC ID: OUR-XBEE

The enclosed device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (i.) this device may not cause harmful interference and (ii.) this device must accept any interference received, including interference that may cause undesired operation.

For questions or comments, contact Scott Thornton  
at 515-232-0328 or email: [scott@designgrid.com](mailto:scott@designgrid.com)

For technical support, email: [support@iascaled.com](mailto:support@iascaled.com)

**Visit the Iowa Scaled Engineering website  
and store to learn more about our full line  
of model railroad electronics.**

**[www.iascaled.com](http://www.iascaled.com)**

© 2017 Iowa Scaled Engineering, LLC and Designgrid, LLC

**[www.protothrottle.com](http://www.protothrottle.com)**





Notes

[illegible]



**IOWA SCALED ENGINEERING – ELECTRONICS MADE EASY!**

[www.protothrottle.com](http://www.protothrottle.com)